

# DHO4000 Series

# Digital Oscilloscope

**Data Sheet** 

DSA33104-1110 Nov. 2022





Adopting RIGOL's

# Brand New Self-developed

Chipset "Centaurus"




# Highlights

- Ultra-low noise floor: 18 μVrms in minimum for cleaner signals, measuring small signals more accurately
- High resolution of 12 bits (2<sup>12</sup>=4096) to see the most signal detail

- Up to 4 GSa/s real-time sample rate
- High sensitivity: 100 μV vertical scale, allowing capture of small signals in the microvolt (μV) range
- Wide vertical sensitivity range: 100 μV/div to 10 V/div, capable of handling the smallest to the largest signals
- Front-panel Flex Knobs, bringing smoother interaction and easier measurements
- Optional battery pack in a highly portable package for you to enjoy unlimited freedom



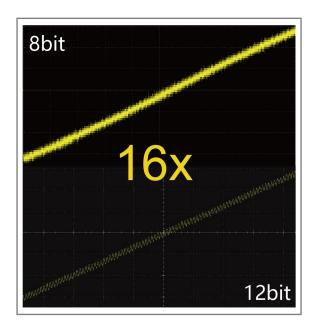

# **High Resolution**

Digital Oscilloscopes, "See" the Most Signal Detail





An oscilloscope is an important tool for making power supply measurements. With up to 12-bit vertical resolution, the DHO4000 series makes it easy for you to perform ripple measurement and quality test.



It sees intricate signal details by providing up to 4 GSa/s sample rate, 12-bit vertical resolution as well as higher DC gain accuracy.



This series digital oscilloscope provides a minimum vertical scale of 100  $\mu$ V/div, 18  $\mu$ Vrms low noise floor, together with 12-bit high resolution to capture low-power small signals effectively.



The testing for the third generation of semiconductor materials represented by gallium nitride (GaN) usually has higher requirements for reduced quantization error of T&M equipment. The 12-bit high resolution and improved DC gain accuracy make it a perfect choice for semiconductor testing.

# **Product Features**

#### **Product Features**

- Brand-new chipset "Centaurus" developed by RIGOL
- Ultra-low noise floor at 18 μVrms in minimum
- 12-bit vertical resolution<sup>[1]</sup>
- 200/400/800 MHz analog bandwidth (selectable), 4 analog channels, and 1 EXT channel
- Up to 4 GSa/s real-time sample rate
- Max. memory depth: 500 Mpts (optional)
- Min. vertical sensitivity: 100 μV/div
- Up to 1,500,000 wfms/s waveform capture rate with the UltraAcquire mode
- 10.1" 1280\*800 HD touch display
- User-friendly Flex Knobs, bringing smoother interaction
- · Standard photoelectric encoder operating knobs, effectively prolonging its service life
- Standard USB Device & Host, LAN, and HDMI interfaces
- Optional battery pack in a highly portable package for unlimited freedom
- Support online version upgrade

DHO4000 series digital oscilloscope is designed to meet the designing, debugging, and testing requirements of the mainstream oscilloscope market. Adopting the brand-new chipset "Centaurus" developed by RIGOL, this series achieves a fast waveform capture rate of 1,500,000 wfms/s with the UltraAcquire mode, 500 Mpts memory depth, 12-bit vertical resolution, all combined with excellent noise floor performance and vertical accuracy to meet your requirements for more accurate measurements, bringing extraordinary T&M experience for you.

#### NOTE:

[1]: 16 bits in High Resolution mode.

# RIGOL Probes and Accessories Supported by the Series

#### **RIGOL Passive Probes**

Model	Туре	Description		
High-impedance Probe	2			
PVP2150	High-impedance Probe	<ul> <li>Attenuation: 10:1/1:1</li> <li>1X BW: DC to 35 MHz</li> <li>10X BW: DC to 150 MHz</li> <li>Compatibility: All models of RIGOLdigital oscilloscopes</li> </ul>		
PVP2350	High-impedance Probe	<ul> <li>Attenuation: 10:1/1:1</li> <li>1X BW: DC to 35 MHz</li> <li>10X BW: DC to 350 MHz</li> <li>Compatibility: All models of RIGOLdigital oscilloscopes</li> </ul>		
PVP3150	High-impedance Probe	<ul> <li>Attenuation: 10:1/1:1</li> <li>1X BW: DC to 20 MHz</li> <li>10X BW: DC to 150 MHz</li> <li>Compatibility: All models of RIGOLdigital oscilloscopes</li> </ul>		
RP3500A	High-impedance Probe	<ul> <li>Attenuation: 10:1</li> <li>BW: DC to 500 MHz</li> <li>Compatibility: MSO/DS4000, DS6000, MSO/DS7000, MSO8000, MSO8000A, DHO4000/1000, and DS70000 series.</li> </ul>		
High Voltage Single-en	High Voltage Single-ended Probe			
RP1010H	High Voltage Probe	<ul> <li>Attenuation: 1000:1</li> <li>BW: DC to 40 MHz</li> <li>DC: 0 to 10 kV DC</li> <li>AC: pulse ≤20 kVp-p</li> <li>AC: sine ≤7 kV<sub>rms</sub></li> <li>Compatibility: All models of RIGOLdigital oscilloscopes</li> </ul>		

Model	Туре	Description		
RP1018H	High Voltage Probe	<ul> <li>Attenuation: 1000:1</li> <li>BW: DC to 150 MHz</li> <li>DC+AC<sub>peak</sub>: 18 kV CAT II</li> <li>AC<sub>rms</sub>: 12 kV CAT II</li> <li>Compatibility: All models of RIGOLdigital oscilloscopes</li> </ul>		
RP1300H	High Voltage Single- ended Probe	<ul> <li>Attenuation: 1000:1</li> <li>BW: DC to 300 MHz</li> <li>CAT I 2000 V (DC+AC)</li> <li>CAT II 1500 V (DC+AC)</li> <li>Compatibility: All models of RIGOL digital oscilloscopes</li> </ul>		
High Voltage Differen	tial Probe			
PHA0150	High Voltage Differential Probe	<ul> <li>BW: DC to 70 MHz</li> <li>Max. voltage ≤ 1500 Vpp</li> <li>Compatibility: All models of RIGOLdigital oscilloscopes</li> </ul>		
PHA1150	High Voltage Differential Probe	<ul> <li>BW: DC to 100 MHz</li> <li>Max. voltage ≤ 1500 Vpp</li> <li>Compatibility: All models of RIGOLdigital oscilloscopes</li> </ul>		
PHA2150	High Voltage Differential Probe	<ul> <li>50X BW: DC to 160 MHz</li> <li>500X BW: DC to 200 MHz</li> <li>Max. voltage ≤ 1500 Vpp</li> <li>Compatibility: All models of RIGOLdigital oscilloscopes</li> </ul>		
RP1025D	High Voltage Differential Probe	<ul> <li>BW: DC to 25 MHz</li> <li>Max. voltage ≤ 1400 Vpp (DC + AC P-P)</li> <li>Compatibility: All models of RIGOLdigital oscilloscopes</li> </ul>		
RP1050D	High Voltage Differential Probe	<ul> <li>BW: DC to 50 MHz</li> <li>Max. voltage ≤ 7000 Vpp (DC + AC P-P)</li> <li>Compatibility: All models of RIGOLdigital oscilloscopes</li> </ul>		

BA a dal	T	Description	
Model	Туре	Description	
RP1100D	High Voltage Differential Probe	<ul> <li>BW: DC to 100 MHz</li> <li>Max. voltage ≤ 7000 Vpp (DC + AC P-P)</li> <li>Compatibility: All models of RIGOLdigital oscilloscopes</li> </ul>	
Low Voltage Differen	tial Probe		
RP7080	Low Voltage Differential Probe	<ul> <li>Input Range: ±6.25 V</li> <li>BW: DC to 800 MHz</li> <li>30 Vpp, CAT I</li> <li>Compatibility: MSO/DS4000, DS6000, MSO/DS7000, MSO8000, MSO8000A, DHO4000, and DS70000 series.</li> </ul>	
RP7150	Low Voltage Differential Probe	<ul> <li>Input Range: ±6.25 V</li> <li>BW: DC to 1.5 GHz</li> <li>30 Vpp, CAT I</li> <li>Compatibility: MSO/DS4000, DS6000, MSO/DS7000, MSO8000, MSO8000A, DHO4000, and DS70000 series.</li> </ul>	
PVA7250	Low Voltage Differential Probe	<ul> <li>Input Range: ±2 V</li> <li>BW: DC to 2.5 GHz</li> <li>30 Vpp CAT I</li> <li>Compatibility: MSO/DS7000, MSO8000, MSO8000A, DHO4000, and DS70000 series.</li> </ul>	
Low Voltage Single-e	nded Probe		
RP7080S	Single-ended Active Probe	<ul> <li>Input Range: ±6.25 V</li> <li>BW: DC to 800 MHz</li> <li>30 V peak CAT I</li> <li>Compatibility: MSO/DS4000, DS6000, MSO/DS7000, MSO8000, MSO8000A, DHO4000, and DS70000 series.</li> </ul>	
RP7150S	Single-ended Active Probe	<ul> <li>Input Range: ±6.25 V</li> <li>BW: DC to 1.5 GHz</li> <li>30 V peak CAT I</li> <li>Compatibility: MSO/DS4000, DS6000, MSO/DS7000, MSO8000, MSO8000A, DHO4000, and DS70000 series.</li> </ul>	

Model	Туре	Description
<b>Current Probe</b>		
PCA1030	Current Probe	<ul> <li>BW: DC to 50 MHz (-3 dB)</li> <li>Max. continuous input range: 30 A<sub>rms</sub></li> <li>Max. peak-peak current value: 50 A peak, non-continuous</li> <li>Compatibility: MSO/DS4000, DS6000, MSO/DS7000, MSO8000, MSO8000A, DHO4000, and DS70000 series.</li> </ul>
PCA1150	Current Probe	<ul> <li>BW: DC~10 MHz (-3 dB)</li> <li>Max. continuous input range: 150 A</li> <li>Max. peak-peak current value: 300 A (non-continuous), 500 A (pulse width ≤ 30 μs)</li> <li>Compatibility: MSO/DS4000, DS6000, MSO/DS7000, MSO80000, MSO8000A, DHO4000, and DS70000 series.</li> </ul>
PCA2030	Current Probe	<ul> <li>BW: DC~100 MHz (-3 dB)</li> <li>Max. continuous input range: 30 A<sub>rms</sub></li> <li>Max. peak-peak current value: 50 A peak, non-continuous</li> <li>Compatibility: MSO/DS4000, DS6000, MSO/DS7000, MSO8000, MSO8000A, DHO4000, and DS70000 series.</li> </ul>
PCA1500	Current Probe	<ul> <li>BW: DC to 2 MHz (-3 dB)</li> <li>Max. continuous input range: 500 A<sub>rms</sub></li> <li>Max. peak-peak current value: 700 A peak, non-continuous</li> <li>Compatibility: MSO/DS4000, DS6000, MSO/DS7000, MSO8000, MSO8000A, DHO4000, and DS70000 series.</li> </ul>
P1001C	Current Probe	<ul> <li>BW: DC to 300 kHz</li> <li>Maximum Input</li> <li>AC: ±100 A</li> <li>AC P-P: 200 A</li> <li>AC RMS: 70 A</li> <li>Compatibility: All models of RIGOLdigital oscilloscopes</li> </ul>

Model	Туре	Description
•		<ul><li>BW: DC to 1 MHz</li><li>Maximum Input</li></ul>
		AC: ±70 A
	Current Probe	AC P-P: 140 A
RP1002C		<ul><li>AC RMS: 50 A</li><li>Compatibility: All models of RIGOLdigital oscilloscopes</li></ul>
		<ul><li>BW: DC to 50 MHz</li><li>Maximum Input</li></ul>
		AC P-P: 50 A (non-continuous)
RP1003C	Current Probe	<ul> <li>AC RMS: 30 A</li> <li>Compatibility: All models of RIGOLdigital oscilloscopes</li> <li>Required to order RP1000P power supply.</li> </ul>
9		BW: DC to 100 MHz Maximum Input
		AC P-P: 50 A (non-continuous)
RP1004C	Current Probe	<ul> <li>AC RMS: 30 A</li> <li>Compatibility: All models of RIGOLdigital oscilloscopes</li> <li>Required to order RP1000P power supply.</li> </ul>
	Current Probe	BW: DC to 10 MHz  Maximum Input
20		AC P-P: 300 A (non-continuous), 500 A (@pulse width $\leq$ 30 us)
RP1005C		<ul> <li>AC RMS: 150 A</li> <li>Compatibility: All models of RIGOLdigital oscilloscopes</li> <li>Required to order RP1000P power supply.</li> </ul>
		BW: DC to 2 MHz  Maximum Input
		AC P-P: 700 A peak, non-continuous
RP1006C	Current Probe	<ul> <li>AC RMS: 500 A</li> <li>Compatibility: All models of RIGOLdigital oscilloscopes</li> <li>Required to order RP1000P power supply.</li> </ul>

Model	Туре	Description
RIGOL THUMP FOURM EMPLY  FREE  A STATE  A STATE	4CH Power Supply	Four-channel power adapter for RP1003C, RP1004C, RP1005C, and RP1006C Current Probes.
RP1000P		

# Specifications

All the specifications are guaranteed except the parameters marked with "Typical" and the oscilloscope needs to operate for more than 30 minutes under the specified operation temperature.

### **Overview of the DHO4000 Series Technical Specifications**

Overview of the DHO4000 Series Technical Specifications				
Model	DHO4204	DHO4404	DHO4804	
Analog Bandwidth (50 $\Omega$ , -3 dB)	200 MHz	400 MHz	800 MHz	
Analog Bandwidth (1 $M\Omega$ , -3 dB)	200 MHz	400 MHz	500 MHz	
Calculated Rise Time under 50 $\Omega$ (10% to 90%, Typical)	≤1.75 ns	≤875 ps	≤500 ps	
Input Channels	4 analog channel inputs	, 1 EXT channel input		
Sampling Mode	Real-time sampling			
Max. Sample Rate of Analog Channels	4 GSa/s (single channel <sup>[1]</sup> ), 2 GSa/s (half channels <sup>[2]</sup> ), 1 GSa/s (all channels <sup>[3]</sup> )  Note: The sample rate reaches 1 GSa/s when all channels are enabled. For			
	DHO4804, the maximum analog bandwidth is only 400 MHz.			
M M 5 II	Standard: 250 Mpts (single channel <sup>[1]</sup> ), 125 Mpts (half channels <sup>[2]</sup> ), 62.5 Mpts (all channels <sup>[3]</sup> )			
Max. Memory Depth	Optional: 500 Mpts (single channel <sup>[1]</sup> ), 250 Mpts (half channels <sup>[2]</sup> ), 125 Mpts (all channels <sup>[3]</sup> )			
Max. Waveform	50,000 wfms/s (Vector Mode)			
Capture Rate	1,500,000 wfms/s (UltraAcquire Mode)			
Vertical Resolution	12 bits			
Hardware Real-time Waveform Recording and Playing	Up to 500,000 frames			
Peak Detect	Capture glitches as narrow as 500 ps			
Display Size and Type	10.1-inch capacitive multi-touch display			

#### **Overview of the DHO4000 Series Technical Specifications**

Display Resolution 1280 x 800

## **Vertical System Analog Channels**

<b>Vertical System Ana</b>	log Channels	
Input Coupling		DC, AC, or GND
Input Impedance		1 MΩ ± 1%, 50 Ω ± 1%
Input Capacitance		19 pF ± 3 pF
Probe Attenuation Ratio		0.001X, 0.002X, 0.005X, 0.01X, 0.02X, 0.05X, 0.1X, 0.2X, 0.5X, 1X, 2X, 5X, 10X, 20X, 50X, 100X, 200X, 500X, 1000X, 2000X, 5000X
Probe Recognition		Auto-recognized RIGOL probe
	1 ΜΩ	CAT I 300 V <sub>rms</sub> , 400 V <sub>pk</sub> (DC + V <sub>peak</sub> )
	50 Ω	5 V <sub>rms</sub>
Maximum Input Voltage		No transient overvoltage allowed for 50 $\Omega$ or 1 $M\Omega$ routes whether the probe is used or not.
	Remarks	Use this instrument only for measurements within its specified measurement category (not rated for CAT II, III, IV).
Vertical Resolution		12 bits
Effective Number of Bits (ENOB, Typical)		>8
Input Sensitivity	1 ΜΩ	100 μV/div to 10 V/div
Range <sup>[4]</sup>	50 Ω	100 μV/div to 1 V/div
		±0.5 V (<500 μV/div)
	1 ΜΩ	±1 V (≥500 µV/div, ≤65 mV/div)
Offset Range		±10 V (>65 mV/div, ≤270 mV/div)
		±20 V (>270 mV/div, ≤2.75 V/div)
		±100 V (>2.75 V/div, ≤10 V/div)
	50 Ω	±1 V(≤135 mV/div)
		±4 V (>135 mV/div)

<b>Vertical System Analog Channels</b>	
Dynamic Range	±4 div (12 bits)
Bandwidth Limits (Typical)	20 MHz, 250 MHz, FULL; selectable for each channel
DC Vertical Gain Accuracy <sup>[4]</sup>	±2% full scale
DC Vertical Offset Accuracy	$\leq$ 200 mV/div (± 0.1 div ± 2 mV ± 1.5% of offset setting) >200 mV/div (± 0.1 div ± 2 mV ± 1.0% of offset setting)
Channel-to-channel Isolation	≥100:1 (from DC to 500 MHz), ≥30:1 (> 500 MHz to full bandwidth)
ESD Tolerance	±8 kV (for input BNC)

# **Horizontal System Analog Channels**

Horizontal System Analog Channels		
Time Base Range		500 ps/div to 1 ks/div
		Time base fine adjustment setting available
Time Base Resolution		100 ps
Time Base Accuracy		±1.5 ppm ± 1 ppm/year
Time-base Delay Time Range	Pre-trigger	-5 div
	Post- trigger	1 s or 100 div, whichever is greater
Δ Time Accuracy		$\pm$ (time base accuracy x reading) $\pm$ (0.001 x screen width) $\pm$ 20 ps
Channel-to-channel Deskew		Channel-to-channel deskew range: ±100 ns, accuracy: ±1 ps
Analog Channel-to- Channel Delay (Typical)		≤500 ps <sup>[5]</sup>

Horizontal System Analog Channels		
	YT	Default mode
	XY	On channel 1/2/3/4
Horizontal Mode	SCAN	Time base ≥ 200 ms/div
	ROLL	Time base $\geq$ 50 ms/div or $\geq$ 100 ms/div (selectable), available to enter or exit the ROLL mode by turning the horizontal timebase knob

# **Acquisition System**

<b>Acquisition System</b>			
Max. Sample Rate of Analog Channels	4 GSa/s (single channel <sup>[1]</sup> ), 2 GSa/s (half channels <sup>[2]</sup> ), 1 GSa/s (all channels <sup>[3]</sup> )		
Max. Memory Depth	Standard: 250 Mpts (single channel <sup>[1]</sup> ), 125 Mpts (half channels <sup>[2]</sup> ), 62.5 Mpts (all channels <sup>[3]</sup> )		
of Analog Channels	Optional: 500 Mpts (single channel <sup>[1]</sup> ), 250 Mpts (half channels <sup>[2]</sup> ), 125 Mpts (all channels <sup>[3]</sup> )		
Acquisition Mode	Normal	Default mode	
	Peak Detect	Capture glitches as narrow as 500 ps	
	Average	Selectable from 2, 4, 8, 16to 65,536	
	High Resolution	14 bits, 16 bits	
	UltraAcquire	Up to 1,500,000 wfms/s waveform capture rate	

# **Trigger System**

Trigger System	
Trigger Sources	Analog channel (1~4), EXT TRIG, AC Line
Trigger Mode	Auto, Normal, and Single

<b>Trigger System</b>		
Trigger Coupling	DC	DC coupled trigger
	AC	AC coupled trigger
	HF Reject	High frequency reject, cutoff frequency ~75 kHz (internal trigger only)
	LF Reject	Low frequency reject, cutoff frequency ~75 kHz (internal trigger only)
Noise Rejection		Increase delay for the trigger circuit (internal trigger only), on/off
Trigger Holdoff Range		8 ns to 10 s
Trigger	Internal	Analog bandwidth
Bandwidth	External	200 MHz
	Internal	0.50 div, ≥50 mV/div
Trigger Sensitivity		0.7 div (with noise rejection enabled)
ingger sensitivity	External	200 mVpp, from DC to 100 MHz
		500 mVpp, from 100 MHz to 200 MHz
	Input Impedance	1 MΩ±1%, BNC connector
EXT TRIG	Trigger Jitter	< 1 ns <sub>rms</sub>
	(Typical)	Normal acquisition, Edge trigger, trigger level located near 50% of EXT input signal
Trigger Level Range	Internal	±5 div from center screen
	External	±5 V
	AC Line	fixed 40%-60%

# Trigger Type

Trigger Type	
Trigger Type	Standard: Edge trigger, Pulse trigger, Slope trigger, Video trigger, Pattern trigger, Duration trigger, Timeout trigger, Runt trigger, Window trigger, Delay trigger, Setup/Hold trigger, Nth Edge trigger, I2C, SPI, RS232/UART, CAN Optional: CAN-FD, LIN, FlexRay, I2S, MIL-STD-1553

Trigger Type	
Edge	Triggers on the threshold of the specified edge of the input signal. The edge types can be Rising, Falling, or Either.
	Source channel: CH1~CH4, EXT, or AC Line
Pulse Width	Triggers on the positive or negative pulse, whose time duration is less than a value, greater than a value, or inside a time range.  Source channel: CH1~CH4
Slope	Triggers on the positive or negative slope of the specified time, whose time is less than a value, greater than a value, or inside a time range.  Source channel: CH1~CH4
Video	Trigger on all lines, specified line, odd/even fields that conform to the video standards. The supported video standards include NTSC, PAL/SECAM, 480p/60Hz, 576p/50Hz, 720p/60Hz, 720p/50Hz, 720p/30Hz, 720p/25Hz, 720p/24Hz, 1080p/60Hz, 1080p/50Hz, 1080p/25Hz, 1080p/24Hz, 1080i/60Hz, and 1080i/50Hz.
	Source channel: CH1~CH4
Pattern	Identifies a trigger condition by searching for a specified pattern. The pattern is a combination of multiple selected channel sources. The logic pattern of each channel is H, L, X, Rising, or Falling.
	Source channel: CH1~CH4
Duration	Triggers when the specified pattern meets the specified duration condition. The pattern is a combination of multiple selected channel sources. The logic pattern of each channel is H, L, and X. The duration is less than a value, greater than a value, inside a time range, or outside a time range.
	Source channel: CH1~CH4
Timeout	Triggers when duration of a certain event exceeds the specified time. The event can be specified as Rising, Falling, or Either.  Source channel: CH1~CH4
Runt	Triggers when the pulses pass through one threshold but fail to pass through another threshold.  Source channel: CH1~CH4
Triggers in a specified window state when the rising edge of the signal the upper threshold or the falling edge crosses the lower threshold. The window state can be Enter, Exit, or Time.  Source channel: CH1~CH4	
Delay	Triggers when the time difference between the specified edges of Source A and Source B meets the preset time. The delay time is less than a value, greater than a value, inside a time range, or outside a time range.  Source channel: CH1~CH4
	-

Trigger Type		
Setup/Hold	When the setup time or hold time between the input clock signal and the data signal is smaller than the specified time.  Source channel: CH1~CH4	
Nth Edge	Triggers on the Nth edge after the specified idle time. The edge can be specified as Rising or Falling.  Source channel: CH1~CH4	
RS232/UART	Triggers on the Start, Error, Check Error, or Data frame of the RS232/UART bus (up to 20 Mb/s).  Source channel: CH1~CH4	
I2C	Triggers on the Start, Stop, Restart, MissedACK, Address (7 bits, 8 bits, or 10 bits), Data, or Address Data of the I2C bus.  Source channel: CH1~CH4	
SPI	Triggers on the specified pattern of the specified data width (4 to 32) of SPI bus. CS and Timeout are supported.  Source channel: CH1~CH4	
CAN	Triggers on the start of a frame, end of a frame, Remote ID, Overload, Frame ID, Frame Data, Data&ID, Frame Error, Bit Fill, Answer Error, Check Error, Format Error, and Random of the CAN signal (up to 5 Mb/s). The supported CAN bus signal types include CAN_H, CAN_L, TX/RX, and DIFF.  Source channel: CH1~CH4	
	DHO4000-AUTOA option	
CAN-FD (Optional)	Triggers on the start of a frame, end of a frame, Remote ID, Overload, Frame ID, Frame Data, Data&ID, Frame Error, Bit Fill, Answer Error, Check Error, Format Error, and Random of the CAN-FD signal (up to 10 Mb/s). The supported CAN bus signal types include CAN_H, CAN_L, TX/RX, and DIFF.	
	Source channel: CH1~CH4	
FlexRay (Optional)	DHO4000-FLEXA option  Triggers on the specified position (TSS End, FSS_BSS End, FES End, DTS End), frame (null, Syn, Start, All), symbol (CAS/MTS and WUS), error (Head CRC Err, Tail CRC Err, Decode Err, and Random Err) of the FlexRay signal (up to 10 Mb/s). Source channel: CH1~CH4	
_	DHO4000-AUTOA option	
LIN (Optional)	Triggers on the Sync, ID, Data (length settable), Data&ID, Wakeup, Sleep, and Error of the LIN bus signal (up to 20 Mb/s).  Source channel: CH1~CH4	

DHO4000-AUDIOA option	
Triggers on 2's complement data of audio left channel, right channel, or either channel (=, $\neq$ , >, <, <>, ><). The available alignment modes include I2S, LJ, and RJ.	
Source channel: CH1~CH4	
DHO4000-AEROA option	
Triggers on Sync (Data Sync, Cmd/Status Sync, and All Sync), Data, RTA, RTA +11Bit, and Error (Sync Error and Check Error) of the MIL-STD-1553 bus.  Source channel: CH1~CH4	

# Search & Navigate

Search & Navigate		
Туре	Edge, pulse width	
Source	Analog channels	
Сору	Copy to/from trigger; independent settings including threshold and trigger condition setup	
Result Display	Event list or be exported to external/internal memory	
Navigate	Time: view acquired waveforms in time order	
	Event: use the navigation controls to go to found search events	
	Segments: use the navigation controls to play through the acquired segments in UltraAcquire mode	

#### **Waveform Measurement**

Waveform Measurement			
	Number of Cursors	2 pairs of XY cursors	
	Manual Mode	Voltage deviation between cursors (ΔY)	
		Time deviation between cursors ( $\Delta X$ )	
Cursor		Reciprocal of $\Delta X$ (Hz) (1/ $\Delta X$ )	
	Track Mode	Fix Y-axis to track X-axis waveform point's voltage and time values	
		Fix X-axis to track Y-axis waveform point's voltage and time values	
	Auto Measurement	Allow to display cursors during auto measurement	
	XY Mode	Measures the voltage parameters of the corresponding channel waveforms in XY time base mode	
		X = Channel 1, Y = Channel 2	

<b>Waveform Measu</b>	Waveform Measurement			
Auto Measurement	Number of Measurements	41 auto measurements; and up to 14 measurements can be displayed at a time.		
	Measurement Source	CH1 to CH4, Math1 to Math4		
	Measurement Range	Main, Zoom		
	All Measurements	Displays 33 measurement items (vertical and horizontal) for the current measurement channel; the measurement results are updated continuously.		
	Vertical	Vmax, Vmin, Vpp, Vtop, Vbase, Vamp, Vupper, Vmid, Vlower, Vavg, VRMS, Per. VRMS, Overshoot, Preshoot, Area, Period Area, and AC RMS.		
	Horizontal	Period, Frequency, Rise Time, Fall Time, +Width, -Width, +Duty, -Duty, Positive Pulse Count, Negative Pulse Count, Rising Edge Count, Falling Edge Count, Tvmax, Tvmin, +Slew Rate, and -Slew Rate		
	Others	Delay (A $\uparrow$ -B $\uparrow$ ), Delay (A $\uparrow$ -B $\downarrow$ ), Delay (A $\downarrow$ -B $\uparrow$ ), Delay (A $\downarrow$ -B $\downarrow$ ), Phase (A $\uparrow$ -B $\uparrow$ ), Phase (A $\downarrow$ -B $\uparrow$ ), and Phase (A $\downarrow$ -B $\downarrow$ )		
	Statistics	Items: Current, Average, Max, Min, Standard Deviation, Count		
		Statistical times settable		

## **Waveform Math**

<b>Waveform Math</b>	
Number of Math Functions	4, displays 4 math functions simultaneously
Arithmetic	A+B, A-B, A×B, A/B, FFT, A&&B, A  B, A^B, !A, Intg, Diff, Lg, Ln, Exp, Sqrt, Abs, AX+B, LowPass, HighPass, BandPass, and BandStop
Color Grade	FFT supported

<b>Waveform Math</b>		
FFT	Record Size	Up to 1 Mpts
	Window Type	Rectangular, Blackman-Harris, Hanning (default), Hamming, Flattop, and Triangle
	Peak Search	A maximum of 15 peaks, confirmed by the settable threshold and offset threshold set by users

# **Waveform Analysis**

Waveform Analysis			
Waveform		Store the signal under test in segments according to the trigger events, i.e. save all the sampled waveform data as a segment to the RAM for each trigger event. The maximum number of the sampled segments reaches 500,000.	
Recording	Source	All enabled analog channels	
	Analysis	Support playing frame by frame or continuous playing; capable of calculating, measuring, and decoding the played waveforms	
Pass/Fail Test		Compare the signal under test with the user-defined mask to provide the test results: the number of successful tests, failed tests, and the total number of tests. The pass/fail event can enable immediate stop, beeper, and the screenshot.	
	Source	Any analog channel	
Color Grade		A dimensional view for color grade waveforms, color grade >16, 256-level color scale display	
	Source	Any analog channel	
	Color Theme	Temperature and intensity	
	Mode	All modes available	

# **Serial Decoding**

<b>Serial Decoding</b>	
No. of Decodings	4, decodes and enables/disables four protocol types simultaneously
Decoding Type	Standard: Parallel, RS232/UART, I2C, SPI, CAN
	Optional: LIN, CAN-FD, FlexRay, I2S, MIL-STD-1553

<b>Serial Decoding</b>				
Parallel	Up to 4 bits of Parallel decoding, available for any analog channel. User-defined clock and auto clock settings are supported.			
	Source channel: CH1~CH4			
RS232/UART	Decodes the RS232/UART (up to 20 Mb/s) bus's TX/RX data (5 to 9 bits), parity (Odd, Even, or None), and stop bits (1 to 2 bits)			
	Source channel: CH1~CH4			
I2C	Decodes the address (with or without the R/W bit) of the I2C bus, data, and ACK.			
	Source channel: CH1~CH4			
SPI	Decodes the MISO/MOSI data (4 to 32 bits) of the SPI bus. Timeout and CS are supported.			
	Source channel: CH1~CH4			
CAN	Decodes the remote frame (ID, byte number, CRC), overload frame, and data frame (standard/extended ID, control domain, data domain, CRC, and ACK) of the CAN bus (up to 5 Mb/s). The supported CAN bus signal types include CAN_H, CAN_L, TX/RX, and DIFF.			
	Source channel: CH1~CH4			
	DHO4000-AUTOA option			
CAN-FD (Optional)	Decodes the remote frame (ID, byte number, CRC), overload frame, and data frame (standard/extended ID, control domain, data domain, CRC, and ACK) of the CAN-FD bus (up to 10 Mb/s). The supported CAN-FD bus signal types include CAN_H, CAN_L, TX/RX, and DIFF.			
	Source channel: CH1~CH4			
	DHO4000-AUTOA option			
LIN (Optional)	Decodes the protocol version (1.X or 2.X) of the LIN bus (up to 20 Mb/s). The decoding displays sync, ID, data, and check sum.			
	Source channel: CH1~CH4			
FlexRay (Optional)	DHO4000-FLEXA option			
	Decodes the frame ID, PL (payload), Header CRC, Cycle Count, Data, Tail CRC, and DTS of the FlexRay bus (up to 10 Mb/s). The supported signal types include BP, BM, and RX/TX.			
	Source channel: CH1~CH4			

<b>Serial Decoding</b>		
I2S (Optional)	DHO4000-AUDIOA option	
	Decodes I2S audio bus left channel data and right channel data, supporting 4 to 32 bits. The available alignment modes include I2S, LJ, and RJ.	
	Source channel: CH1~CH4	
	DHO4000-AEROA option	
MIL-STD-1553 (Optional)	Decodes the MIL-STD-1553 bus signal's data word, command word, and status word (address+last 11 bits).	
	Source channel: CH1~CH4	

### Auto

Auto	
AutoScale	Minimum voltage greater than 10 mVpp, duty cycle greater than 1%, and frequency over 35 Hz

# **Digital Voltmeter**

<b>Digital Voltmeter</b>	
Source	Any analog channel
Function	DC, AC+DC <sub>rms</sub> , AC <sub>rms</sub>
Resolution	ACV/DCV: 4 bits
Limits Beeper	Support upper/lower limit settings; sounds an alarm when the voltage value is inside or outside of the limit range

## **Precision Counter**

Precision Counter		
Source		Any analog channel and EXT
Measurement		Frequency, period, totalize
Totalizer	Resolution	3 to 6 digits, user-defined
	Max. Frequency	Maximum analog bandwidth or 500 MHz (the smaller of the two)
Totalizer		48-bit totalizer
		Counts the number of the rising edges

_					_			_	
Р	re	CIS	ic	n	C	OI	ın	te	r

Time Reference Internal Reference

#### **Command Set**

Command Set		
Common Commands Support	Standard SCPI commands	
Error Message Definition	Error Message	
Support Status Report Mechanism	Status Reporting	
Support Sync Mechanism	Synchronization	

# Display

Display	
LCD	10.1-inch capacitive multi-touch gesture-enabled display
Resolution	1280 x 800 (Screen Region) 16:9
Graticule	10 horizontal divisions x 8 vertical divisions
Persistence	Off, Infinite, variable persistence (100 ms to 10 s)
Brightness	256 intensity levels (LCD, HDMI)

# **Processor System**

Processor System	
Processor	Cortex-A72, 1.8 GHz, hexa-core
System Memory	4 GB RAM
Operating System	Android
Internal Non-volatile Memory	8 GB

## **I/O**

1/0	
USB3.0 Host	2 on the front panel
USB3.0 Device	1 on the rear panel
LAN Port	1 on the rear panel, 10/100/1000 Base-T, supporting LXI-C

1/0			
Web Control		Support Web Control interface (input the IP address of the oscilloscope into the Web browser to display the operation interface of the oscilloscope)	
		BNC output on the rear panel	
		Vo (H) $\geq$ 2.5 V open circuit, $\geq$ 1.0 V 50 $\Omega$ to GND	
		Vo (L) $\leq$ 0.7 V to load $\leq$ 4 mA; $\leq$ 0.25 V 50 $\Omega$ to GND	
AUX Out	Trig Out	Output a pulse signal when the oscilloscope is triggered	
	Pass/Fail	Output a pulse signal when a pass/fail event occurs.  Support user-defined pulse polarity and pulse time (100 r to 10 ms)	
	Rise Time	≤ 1.5 ns	
10 MHz Reference Clock In/Out	Input Interface	1, BNC connector on the rear panel	
	Output Interface	1, BNC connector on the rear panel	
	Input Mode	50 $\Omega$ , with the amplitude 130 mVpp to 4.1 Vpp (-10 dBm, 20 dBm), frequency 10 MHz $\pm$ 10 ppm	
	Output Mode	50 $\Omega$ , 1.5 Vpp sine waveform	
HDMI		1 on the rear panel, HDMI 1.4, A plug; used to connect an	
Video Output		external monitor or projector	
Probe Compensation Output		1 kHz frequency, 0 to 3 V amplitude, Square	

#### Power

Power		
Power Voltage	AC 100 to 240 V, 50 to 60 Hz	
Power	400 VA maximum (connect various interfaces, USB storage device, and active probes)	
Fuse	3.15 A, T degree, 250 V	

#### **Environment**

Environment		
Temperature Range	Operating	0°C to +50°C
	Non-operating	-30°C to +60°C
Humidity Range	Operating	below +30°C, ≤90% RH (without condensation)
		+30°C to +40°C, ≤75% RH (without condensation)
		+40°C to +50°C, ≤45% RH (without condensation)
	Non-operating	below 60°C: ≤90% RH (without condensation)
Altitude	Operating	Below 3,000 m
	Non-operating	Below 15,000 m

## **Warranty and Calibration Interval**

Warranty and Calibration Interval		
Warranty	Three years for the mainframe, excluding the probes and accessories.	
Recommended Calibration Interval	18 months	

# Regulations

Regulations				
	Compliant with EMC DIRECTIVE 2014/30/EU, compliant with or higher than the standards specified in IEC 61326-1:2013/EN 61326-1:2013 Group 1 Class A			
	CISPR 11/EN 55011			
	IEC 61000-4-2:2008/EN 61000-4-2	±4.0 kV (contact discharge), ±8.0 kV (air discharge)		
	IEC 61000-4-3:2002/EN 61000-4-3	3 V/m (80 MHz to 1 GHz); 3 V/m (1.4 GHz to 2 GHz); 1 V/m (2.0 GHz to 2.7 GHz)		
Electromagnetic Compatibility	IEC 61000-4-4:2004/EN 61000-4-4	1 kV power line		
	IEC 61000-4-5:2001/EN 61000-4-5	0.5 kV (phase-to-neutral voltage); 1 kV (phase-to-earth voltage); 1 kV (neutral-to-earth voltage)		
	IEC 61000-4-6:2003/EN 61000-4-6	3 V, 0.15-80 MHz		
	IEC 61000-4-11:2004/EN	Voltage dip: 0% UT during half cycle; 0% UT during 1 cycle ; 70% UT during 25 cycles		
	61000-4-11	short interruption: 0% UT during 250 cycles		
	EN 61010-1:2019			
	EN 61010-031:2015			
Safety	IEC 61010-1:2016			
	IEC 61010-2-030:2017			
	UL 61010-1:2012 R7			
	UL 61010-2-31:2017 R2			
	CAN/CSA-22.2 No. 61010-1-12:2017			
	CAN/CSA-22.2 No. 61010-2-30:2018			
	CAN/CSA-22.2 No. 61010-031-07:201			
Vibration	Meets GB/T 6587; class 2 random			
	Meets MIL-PRF-28800F and IEC60068-2-6; class 3 random			

Regulations	
Shock	Meets GB/T 6587-2012; class 2 random
	Meets MIL-PRF-28800F and IEC 60068-2-27; class 3 random
	In non-operating conditions: 30 g, half-sine wave, 11 ms duration, 3 shocks along the main axis, total of 18 shocks

#### **Mechanical Characteristics**

Mechanical Characteristics			
Dimensions	358.14 mm (W) x 214.72 mm (H) x 120.62 mm (D)		
Rack Mount Kit	4U		
Weight <sup>[6]</sup>	Net: 3.8 kg		
weightie	Shipping: 5.37 kg		

#### **Non-volatile Memory**

Non-volatile Memory		
	Setup/Image setup (*.stp), image (*.png, *.bmp, *.jpg)	
Data/File Storage	Waveform Data	CSV waveform data (*.csv), binary waveform data (*.bin,), list data (*.csv), and reference waveform data (*.ref, *.csv, *.bin)
Internal Capacity		8 GB
Reference Waveform		Displays 10 internal waveforms
Setting		Limited by size of USB drive
USB Capacity		Industry standard flash drives

#### **NOTE:**

- [1]: If any one of the channels is enabled, it is called single channel mode.
- [2]: If two of the channels are enabled, it is called half channels mode.
- [3]: If any three channels or all four channels are enabled, it is called all channels mode.
- [4]: 100  $\mu$ V/div, 200  $\mu$ V/div, and 500  $\mu$ V/div are a magnification of 1 mV/div setting. For vertical accuracy calculations, use full scale of 8 mV for sensitivity setting.
- [5]: For any channel, under the same input impedance with DC-coupled, the Volts/div setting is the same for 100 mV/div and 200 mV/div setting.

[6]: Standard configuration.

# Order Information and Warranty Period

## **Order Information**

Order Information	Order No.
Model	
200 MHz, 4 GSa/s, 250 Mpts, 4CH DHO	DHO4204
400 MHz, 4 GSa/s, 250 Mpts, 4CH DHO	DHO4404
800 MHz, 4 GSa/s, 250 Mpts, 4CH DHO	DHO4804
Standard Accessories	
Power cord (based on destination country)	
USB Cable	
4 Passive HighZ Probes (350 MHz), Standard for DHO4204	PVP2350
4 Passive HighZ Probes (500 MHz), Standard for DHO4404/ DHO4804	RP3500A
Bandwidth Upgrade Option	
200 MHz to 400 MHz Upgrade Option	DHO4000-BWU2T4
200 MHz to 800 MHz Upgrade Option	DHO4000-BWU2T8
400 MHz to 800 MHz Upgrade Option	DHO4000-BWU4T8
Memory Depth Upgrade Option	
500 Mpts Memory Depth Upgrade Option	DHO4000-RLU-05
Serial Protocol Analysis Option	
Automotive Serial Triggering and Analysis (CAN-FD/LIN)	DHO4000-AUTOA
Aerospace Serial Triggering and Analysis (MIL-STD-1553)	DHO4000-AEROA
Automotive Serial Triggering and Analysis (FlexRay)	DHO4000-FLEXA
Audio Serial Triggering and Analysis (I2S)	DHO4000-AUDIOA
Others	
Power Analysis Option	DHO4000-PWRA
Battery Pack Option	DHO4000-BPACK
Option Package (comprising DHO4000-AUTOA, AEROA, FLEXA, AUDIOA, and PWRA options)	DHO4000-BND


#### **NOTE:**

For all the mainframes, accessories, and options, please contact the local office of RIGOL.

# **Warranty Period**

Three years for the mainframe, excluding the probes and accessories.

# Option Ordering and Installation Process

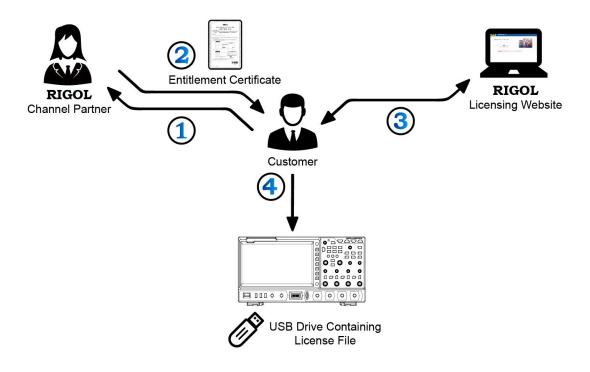

- According to the usage requirements, please purchase the specified function options from RIGOL
   Sales Personnel, and provide the serial number of the instrument that needs to install the option.
- **2.** After receiving the option order, the **RIGOL** factory will mail the paper software product entitlement certificate to the address provided in the order.
- 3. Log in to RIGOL official website for registration. Use the software key and instruments serial number provided in the entitlement certificate to obtain the option license code and the option license file.
- 4. Download the option license file to the root directory of the USB storage device, and connect the USB storage device to the instrument properly. After the USB storage device is successfully recognized, the Option install menu is activated. Press this menu key to start installing the option.

**HEADQUARTER** 

RIGOL TECHNOLOGIES CO., LTD. No.8 Keling Road, New District, Suzhou, JiangSu, P.R.China Tel: +86-400620002

Email: info@rigol.com

EUROPE

RIGOL TECHNOLOGIES EU GmbH Carl-Benz-Str.11 82205 Gilching Germany Tel: +49(0)8105-27292-0

Email: info-europe@rigol.com

NORTH AMERICA

RIGOL TECHNOLOGIES, USA INC. 10220 SW Nimbus Ave. Suite K-7 Portland, OR 97223 Tel: +1-877-4-RIGOL-1 Fax: +1-877-4-RIGOL-1 Email: info@rigol.com JAPAN

RIGOL JAPAN CO., LTD. 501, LATORRETTA, 2-37-1, Numabukuro, Nakano-Ku, Tokyo, Japan Tel: +81-3-6262-8932 Fax: +81-3-6262-8933 Email: info-japan@rigol.com

**RIGOL®** is the trademark of **RIGOL**TECHNOLOGIES CO., LTD. Product information in this document subject to update without notice. For the latest information about **RIGOL**'s products, applications and services, please contact local **RIGOL** channel partners or access **RIGOL** official website: www.rigol.com