

PIM Master™

High-Performance Passive Intermodulation Analyzer

Featuring Patented Distance-to-PIM (DTP)™ The Fastest Way to Pinpoint the Source of PIM






PIM Master™ Overview



PIM Master top view with easy reference connection diagram



40 W 1900/2100 Residual PIM Measurement with GPS tagging Listen to relative PIM level with audible tone Save/Recall Setups for standardized testing

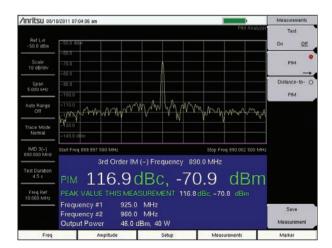

40 W 900 MHz PIM Measurement Plot instantaneous value or Max Hold value Peak Value displayed below the PIM Value

PIM Master™ Introduction

Anritsu Company introduces its first generation high performance PIM testing solution for the Cellular, E-GSM, PCS, and AWS, frequency bands. Anritsu has developed the PIM Master to verify if receiver interference at a cell site is due to an intermodulation product of two or more transmit frequencies, also known as passive intermodulation (PIM).

The PIM Master generates two high power tones in the transmit band of a base station and Anritsu's family of handheld RF instruments' PIM Analyzer measures the 3rd, 5th, or 7th order intermodulation products in the receive band coming back down the same cable. And the GPS option will record the location of the measurement.

Anritsu's handheld instruments supporting the PIM Master include:

- Site Master™ S332E, S362E
- Spectrum Master™ MS271xE, MS2721B, MS272xC
- Cell Master™ MT8212E, MT8213E
- BTS Master™ MT8221B, MT8222B

PIM Testing

The current standard of PIM testing offers a well-known system of two primary carriers and a calculated PIM frequency, which is monitored via a spectrum analyzer. This provides a measurement of the overall linearity of the antenna system and the surrounding environment.

As more power goes up the antenna lines a coaxial connection is more likely to cause a fault on a tower. Traffic through the site plays a big part – a relatively quiet site will not usually see the same performance problems that a busy site will see.

The main reason we use a PIM test is that it is the most comprehensive measure of electrical connection quality that is commercially available.

PIM Testing versus Line Sweeping

A PIM test cannot, however, measure VSWR. This means the test set will not see an open or short condition, unless the fault displays non-linear behavior. A return loss figure that is failing will not be determined with a PIM test measurement.

Components deteriorate as they age due to a number of issues, including poor mechanical design, poor installation, and moisture ingress (which is the most significant).

On-site faults can mostly be categorized into two main types: linearity related and impedance related.

PIM testing measurements reflect the overall linearity of an antenna feed line and Line Sweep measurements reflect the overall impedance matching of all of the components in an antenna feed line. Both tests need to be performed to ensure the overall quality of an antenna feed line. Passing one type of test (PIM or Line Sweep) does not guarantee the other test will pass.

Symptoms of PIM problems


Many symptoms could be indicators of PIM problems. These include:

- Receiver desensitization (raised noise floor)
- Rx Diversity alarms
- Spectral re-growth in the transmitter mask
- Excessive dropped/blocked calls
- Cell site coverage shrinking
- Complaints of interference from neighboring cell site owners


FI EX

PIM Master™ Overview

Distance-to-PIM[™] (DTP) Plots Relative PIM Level (dB) vs. Distance (meters)

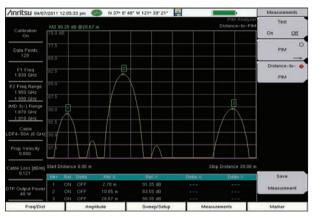

Locating multiple PIM occurrences in antenna cables with DTP

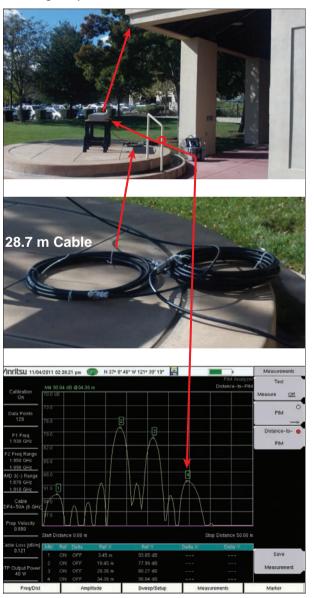

Locating external PIM occurrences beyond the antenna

Where is the PIM?

Anritsu labs has invented and succeeded in developing a patented technology that pinpoints PIM faults called Distance-to-PIM (DTP) $^{\text{TM}}$. No more wasting time rappelling down towers trying to locate PIM, no more wondering if the PIM is coming from the antenna system or the surrounding environment.

The Distance-to-PIM test is simple, immediate, and accurate. DTP informs the technician of the distance and relative magnitude of all the PIM sources simultaneously, both inside the antenna system and beyond the antenna.

DTP is similar to Distance-to-Fault (DTF), which Anritsu introduced in the Site Master™ in 1997, displaying distance versus impedance changes. DTP utilizes algorithms much like DTF to show distance versus the magnitude of non-linear faults.

DTP is a standard feature included with the PIM Master.

Distance-to-PIM lab results

DTP shows the location for PIM problems within the antenna system, as well as distance to external PIM sources outside the antenna system. The DTP example to the left identified the roof obstruction at Marker 4 at 34.4 m. Markers 1, 2, and 3 correctly identified other PIM sources in the cable. This is an incredible step forward in improving the quality of information received from the on-site PIM test.

The Distance-to-PIM test offers far more insight than traditional PIM testing. This information can speed up repairs, control repair costs, and help plan budgets accurately. Comparison of PIM values over time can show if a device is deteriorating with age. This permits fault correction before a failure causes dropped or blocked calls.

2 x 40 Watt PIM Testing

PIM problems can be intermittent and power sensitive. This is often the case when PIM problems are just beginning to show up. This can be due to light corrosion, high traffic loading, or changing weather conditions activating environmental diodes. Using higher power levels can often force otherwise intermittent failures to become visible. Higher power levels may be required to find faults in a multicarrier antenna system and to discover microscopic arcing in connectors.

In many cases PIM faults cannot be discovered with just 2 x 20 Watts of power. With the ability to test at 40 Watts, one can spot serious problems that cannot be seen on a 20 Watt PIM tester.

Storing and Recalling Setups and Measurements

When saving files many choices are available. One can save and recall:

- Set-up file
- Measurement file
- Jpeg screen shot (save only)


Saving and recalling setups makes it quicker to run the same tests over and over again at different sites. Saving and recalling a measurement becomes a reference measurement at a site when you return to see if there has been any deterioration since the last time the site was tested.

Run Line Sweep Tests on the same instruments


Since both PIM measurements and Line Sweep measurements can be made on the same instruments (Site, Cell, or BTS Masters) one can efficiently make Line Sweep measurements at the same time. Now all PIM measurements and Line Sweep measurements are stored together on the same instrument. An installation contractor or technician only has to learn how to use one instrument to make all related antenna measurements for linearity and impedance testing.



PIM Report Generation and Certified Training

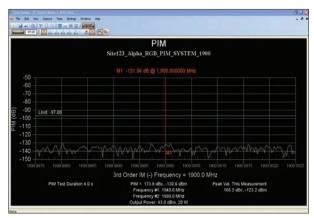

PC Line Sweep Tool utilized for report generation on a PIM trace

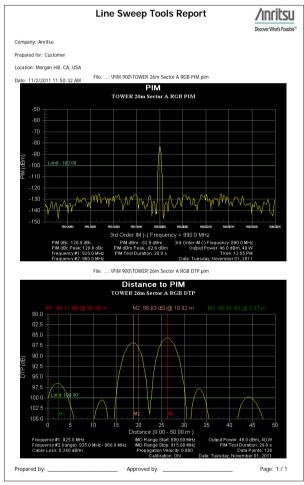

Line Sweep Tools Report with Limit Lines

Line Sweep Tools for Cable, Antenna, and PIM Analysis

Anritsu's Line Sweep Tools is a new generation post processing tool to manage, archive and report on all cable, antenna, and PIM analyzer sweeps. In one tool all measurements can be incorporated into one unified report per antenna system.

Now in one integrated report an operator can have all of the information on the integrity of an antenna system with the measurements of:

- PIM
- Return Loss
- Insertion Loss
- Distance-to-Fault

Contractors, technicians, and engineers can be more productive with one cohesive tool to learn and use in managing antenna line quality measurements.

PIM Master™ Certified PIM Measurement Training Course

Specialized PIM MasterTM passive intermodulation measurement training is an intense one-day instructor led training course that focuses on making PIM measurements (theory and lab). This is modeled on our successful Site MasterTM Certified Line Sweep course.

- · Brief Course Outline
 - · Definition and Description
 - How PIM differs from Return Loss
 - Why is PIM a problem
 - What causes PIM
 - How to test for PIM
 - · PIM test equipment
 - PIM testing process
 - Hints for successful testing
 - Assessing Results
- Labs
 - Hooking up the equipment and confirming proper operation
 - Measuring known good and bad devices
 - Device measurement practice
- Exams
 - Theory and safety
 - · Hands-on practical
- Certification (after passing exams)
 - Certificate of Completion
 - Wallet-sized photo ID

Students will learn technical aspects of PIM measurements, how to set up a PIM measurement, useful examples of what works and what doesn't, interpreting results, and locating the PIM.

Customer Support


Like all Anritsu products, the PIM Master has a range of support products, services and training allowing you to maximize your return-on-investment.

- Anritsu Line Sweep Tool for report generation
- · A full line of PIM testing accessories
- Extended warranty
- PIM Certified Technician Training Course
- Made in the USA


With Anritsu's design know-how and demanding production testing and performance verification you can count on the PIM Master to give you years of reliable dependable service.



PIM Overview

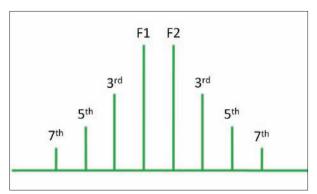

Carriers F1 and F2 with 3rd through 7th order products

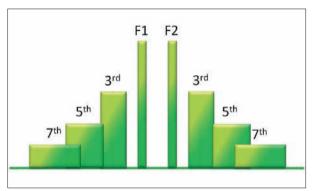

PIM Bandwidth increases with the order of the product



Corrosion (rust) in view of the antenna can cause PIM



Rusty rooftops and fences can be prime sources of $\ensuremath{\mathsf{PIM}}$

What is PIM?

PIM is a form of intermodulation distortion that occurs in passive components normally thought of as linear, such as filters, combiners, surge protectors, cables, connectors, and antennas. However, when subject to the high RF powers found in cellular systems, these devices can generate spurious signals.

PIM shows up as a set of unwanted signals created by the mixing of two or more strong RF signals in a non-linear device, such as in a loose or corroded connector, or in nearby rust. Other names for PIM include the "diode effect" and the "rusty bolt effect."

This pair of formulas can predict PIM frequencies for two carriers:

$$IM_{n+m} = nF1 - mF2$$
$$IM_{n+m} = nF2 - mF1$$

F1 and F2 are the Tx carrier frequencies and the constants n and m are positive integers. When referring to PIM products, the sum of n + m is called the product order, so if m is 2 and n is 1, the result (2+1=3) is referred to as a third order product or IM3.

Typically, the third order product is the strongest causing the most harm when they fall into the Rx band. Because PIM amplitude becomes lower as the order increases, higher order products typically are not strong enough to cause direct frequency problems, but they usually assist in raising the adjacent noise floor.

Once this raised noise floor crosses into the Rx band, it then has an open door (and sometimes gain via an LNA) into the BTS.

It is important to recognize that intermodulation created from modulated signals occupies more bandwidth than the fundamentals. PIM products can be very wide band, covering wide swaths of frequencies.

Why has PIM become an issue recently?

The introduction of high-speed data within mobile communications devices has increased the network traffic within a cellular system to the degree that it is greatly affecting network performance.

As extra cellular transmitters and modulation formats are commissioned into service in new or existing sites, the statistical performance can appear to change dramatically. Ultimately, this can result in poor site/sector performance and reduced coverage, and this is why testing for PIM is now required in the field.

PIM has come to the forefront of network problems recently due to a variety of reasons which can be any combination of the following:

- Higher RF power
 - Multiband systems on the same antenna lines
 - Fully loaded multicarrier systems
 - High density/traffic sites heavily loaded
- Wideband receive filters
- Duplex antenna lines
- Wider bandwidth signals up to 5, 10, and 20 MHz
- Aging infrastructure primarily connectors corroding and loosening
- Environmental diodes created by corrosion in the surrounding area
- Intermittent environmental diodes due to wet and dry conditions
- · Neighboring cell sites generating PIM

An on site PIM test is a comprehensive measure of linearity and construction quality. For more information about PIM testing refer to our whitepaper "Troubleshooting Passive Intermodulation Problems in the Field" document number 11410-00586.

PIM Master[™] Specifications

3^{rd} , 5^{th} , and 7^{th} order intermodulation product in receive band (user selectable)
Distance and magnitude of multiple PIM sources
Distance and magnitude of multiple Phili Sources
Cite Mantariii Courae Constitute Mantariii MCO7415 MCO704D MAO70VC
Site Master™ S3x2E, Spectrum Master™ MS271xE, MS2721B, MA272XC Cell Master™ MT821xE, BTS Master™ MT8221B or MT8222B
Carrier F1, Carrier F2, Intermod Order (3 rd , 5 th , 7 th), Span
Ref Value, Scale, Ref Level Offset, Auto Range (On/Off), Amplitude Tone (On/Off)
Output Power, Test Duration (1 to 60 s), Normal → A, Max Hold → A, Display Type (Trace, Ba
F1, F2, Power
Limit (Upper/Lower), On/Off, Limit Move, Limit Alarm (On/Off)
On/Off, 3.3/5.0 V
Cable Velocity, Distance, Calibrate
PIM Test (Measure/Off) Measure Noise Floor, Save Measurement
Two CW tones of 20, 30, or 40 Watts (≈ 43, 45, 46 dBm) (user selectable)
MW8219A - 1930 to 1990 MHz, 2110 to 2155 MHz MW8209A - 925 to 960 MHz MW8208A - 869 to 894 MHz
MW8219A – 1710 to 1755 MHz, 1850 to 1910 MHz MW8209A – 880 to 915 MHz
MW8208A – 824 to 849 MHz < -112 dBm/-155 dBc typical
3 rd , 5 th , and 7 th order intermodulation product (if in band)
Distance and magnitude of multiple PIM sources
7/16 DIN, female, 50 Ω
Type N, female, 50 Ω (connect to RF In on instrument)
BNC, female, 50 Ω , 10 MHz (connect to Ext. Ref. In on instrument)
Type B (connect to USB Type A port on instrument)
IEC60320 C14
Red push button
90-240 VAC, 50/60 Hz
CE Mark, EMC Directive 2004/108/EC
C-tick N274
EN 61326-1:2006
EN 55011:2007
EN 61000-4-2/-3/-4-4/-4-5/-4-6/-4-11
2006/95/EC, EN 61010-1 Class 1
IEC 60950-1 when used with Company supplied Power cable
−10 °C to 55 °C
95%
MIL-PRF-28800F Class 2
−51 °C to 71 °C
4600 meters, operating and non-operating
300 mm x 425 mm x 500 mm (12 in x 17 in x 20 in)
27 kg (59 lbs)

PIM Master™ Ordering Information

Ordering Information



Model Number MW8208A Cellular 850 MHz

MW8209A E-GSM band 900 MHz

Model Number

Model Number MW8219A PCS/AWS band 1900/2100 MHz Description

PIM Master™ Passive Intermodulation Analyzer (requires S3x2E, MS271xE, MS2721B, MS272xC, MT821xE, MT8221B or MT8222B)

Options MW8208A-0425 MW8208A-0098

MW8209A-0098

Options Options MW8209A-0425 MW8219A-0425 MW8219A-0098

Large Wheel Option (as shown in photo) Standard Calibration to Z540

Standard Accessories (included with PIM Master)



Part Number 10580-00280 11410-00546 2000-1635-R (country dependent)

Description PIM Master™ User Guide PIM Master Product Brochure 3-cable PIM Interface (USB, RF, REF) AC Power Cable

Accessory Kits









Part Number	Description
2000-1637-R	PIM Master Accessory Kit with 2.75 m Armored PIM Test Cable
PIM Accessory Kit includes	(Items below can be ordered separately)
MA82103A	Low PIM Termination, 700 MHz to 2200 MHz, 80 W CW, 7/16 DIN(f), 50 Ω
1091-390-R	PIM Standard, -80 dBm \pm 3 dB @ 1775 MHz, 2x20 W, 7/16 DIN(m) to 7/16 DIN(f), 50 Ω
1091-403-R	PIM Standard, -80 dBm \pm 3 dB @ 910 MHz, 2x20 W, 7/16 DIN(m) to 7/16 DIN(f), 50 Ω
16DD50-2.75-R	Armored PIM Test Cable, 2.75 m, 45 MHz to 3000 MHz, 7/16 DIN(m), 50 Ω
1091-386-R	Adapter, 7/16 DIN(f) to N(f), 50 Ω
1091-389-R	Adapter, 7/16 DIN(f) to N(m), 50 Ω
1091-387-R	Adapter, 7/16 DIN(f) to 7/16 DIN(m), 50 Ω
1091-388-R	Adapter, 7/16 DIN(f) to 7/16 DIN(f), 50 Ω
1091-385-R	Adapter, 7/16 DIN(m) to 7/16 DIN(m), 50 Ω
67135	Anritsu Backpack (For Handheld Products)
01-510	Crescent Wrench
01-512-R	1" 25 N-m Torque Wrench
01-513-R	11/4" 25 N-m Torque Wrench

Optional Accessories

760-257-R MW82xxA Transit Case 760-258-R MW82xxA Accessory Transit Case 2000-1635-R 3-cable PIM Interface (USB, RF, REF) Certified PIM Master™ PIM Measurement Training Course 10580-00315



• U.S.A.

Anritsu Company

1155 East Collins Boulevard, Suite 100, Richardson, TX, 75081 U.S.A. Toll Free: 1-800-ANRITSU (267-4878) Phone: +1-972-644-1777 Fax: +1-972-671-1877

Canada

Anritsu Electronics Ltd.

700 Silver Seven Road, Suite 120, Kanata, Ontario K2V 1C3, Canada Phone: +1-613-591-2003 Fax: +1-613-591-1006

• Brazil

Anritsu Electrônica Ltda.

Praça Amadeu Amaral, 27 - 1 Andar 01327-010 - Bela Vista - São Paulo - SP - Brazil Phone: +55-11-3283-2511 Fax: +55-11-3288-6940

Mexico

Anritsu Company, S.A. de C.V.

Av. Ejército Nacional No. 579 Piso 9, Col. Granada 11520 México, D.F., México Phone: +52-55-1101-2370 Fax: +52-55-5254-3147

• U.K.

Anritsu EMEA Ltd.

200 Capability Green, Luton, Bedfordshire LU1 3LU, U.K. Phone: +44-1582-433280 Fax: +44-1582-731303

France

Anritsu S.A.

12 avenue du Québec, Batiment Iris 1-Silic 612, 91140 VILLEBON SUR YVETTE, France Phone: +33-1-60-92-15-50 Fax: +33-1-64-46-10-65

Germany Anritsu GmbH

Nemetschek Haus, Konrad-Zuse-Platz 1 81829 München, Germany Phone: +49 (0) 89 442308-0 Fax: +49 (0) 89 442308-55

Italy

Anritsu S.r.l.

Via Elio Vittorini 129 00144 Roma Italy Phone: +39-06-509-9711 Fax: +39-06-502-2425

Sweden

Anritsu AB

Borgafjordsgatan 13, 164 40 KISTA, Sweden Phone: +46-8-534-707-00 Fax: +46-8-534-707-30

Finland Δnritsu ΔR

Teknobulevardi 3-5, FI-01530 Vantaa, Finland

Phone: +358-20-741-8100 Fax: +358-20-741-8111

Denmark

Anritsu A/S (for Service Assurance) Anritsu AB (for Test & Measurement)

Kay Fiskers Plads 9, 2300 Copenhagen S, Denmark Phone: +45-7211-2200 Fax: +45-7211-2210

Russia

Anritsu EMEA Ltd.

Representation Office in Russia

Tverskaya str. 16/2, bld. 1, 7th floor. Russia, 125009, Moscow Phone: +7-495-363-1694 Fax: +7-495-935-8962

United Arab Emirates Anritsu EMEA Ltd.

Dubai Liaison Office

P O Box 500413 - Dubai Internet City Al Thuraya Building, Tower 1, Suite 701, 7th Floor Dubai, United Arab Emirates Phone: +971-4-3670352 Fax: +971-4-3688460

Singapore

Anritsu Pte. Ltd.

60 Alexandra Terrace, #02-08, The Comtech (Lobby A) Singapore 118502 Phone: +65-6282-2400 Fax: +65-6282-2533

Please Contact:

• India

Anritsu Pte. Ltd.

India Branch Office

3rd Floor, Shri Lakshminarayan Niwas, #2726, 80 ft Road, HAL 3rd Stage, Bangalore - 560 075, India Phone: +91-80-4058-1300 Fax: +91-80-4058-1301

· P. R. China (Shanghai)

Anritsu (China) Co., Ltd.

Room 1715, Tower A CITY CENTER of Shanghai, No. 100 Zunyi Road Chang Ning District, Shanghai 200051, P.R. China Phone: +86-21-6237-0898 Fax: +86-21-6237-0899

• P. R. China (Hong Kong) Anritsu Company Ltd.

Unit 1006-7, 10/F., Greenfield Tower, Concordia Plaza,

No. 1 Science Museum Road, Tsim Sha Tsui East, Kowloon, Hong Kong, P. R. China Phone: +852-2301-4980 Fax: +852-2301-3545

Japan

Anritsu Corporation

8-5. Tamura-cho. Atsugi-shi. Kanagawa, 243-0016 Japan Phone: +81-46-296-1221 Fax: +81-46-296-1238

Korea

Anritsu Corporation, Ltd.

502, 5FL H-Square N B/D, 681, Sampyeong-dong, Bundang-gu, Seongnam-si, Gyeonggi-do, 463-400 Korea Phone: +82-31-696-7750 Fax: +82-31-696-7751

Australia

Anritsu Pty Ltd.

Unit 21/270 Ferntree Gully Road, Notting Hill, Victoria 3168, Australia Phone: +61-3-9558-8177 Fax: +61-3-9558-8255

Taiwan

Anritsu Company Inc.

7F, No. 316, Sec. 1, Neihu Rd., Taipei 114, Taiwan

Phone: +886-2-8751-1816 Fax: +886-2-8751-1817



The Master Users Group is an organization dedicated to providing training, technical support, networking opportunities and links to Master product development teams. As a member you will receive the Insite Quarterly Newsletter with user stories, measurement tips, new product news and more.

Visit us to register today: www.anritsu.com/MUG




To receive a quote to purchase a product or order accessories visit our online ordering site: www.ShopAnritsu.com

Training at Anritsu

Anritsu has designed courses to help you stay up to date with technologies important to your job.

For available training courses visit: www.anritsu.com/training





® Anritsu All trademarks are registered trademarks of their respective companies. Data subject to change without notice. For the most recent specifications visit: www.anritsu.com







