

Keysight Technologies

U1610A/U1620A

Handheld Digital Oscilloscope

Data Sheet



Indoor viewing mode

Night vision viewing mode



Unlocking Measurement Insights



Introduction

Retool your expectations in the world's first VGA display handheld oscilloscope with two isolated channels

The Keysight Technologies, Inc. U1610A/U1620A is the world's first handheld oscilloscope with a VGA display. This 100/200 MHz handheld oscilloscope offers a floating measurement capability with two CAT III 300 V isolated channels. With up to 2 GSa/s sampling rate and 2 Mpts memory depth, it captures more waveforms from signals such as pulse width modulated circuit, inrush, transient, and motor start up sequences. The benchtop-like display and dual window zoom allow you to easily identify problem areas and zoom in for more detailed analysis. Now, you can view signals in detail and detect glitches easily.

Features

- 100/200 MHz bandwidth with two isolated channels
- 5.7-inch VGA TFT LCD display with 3 selectable viewing modes (indoor, outdoor and night vision)
- 2 Mpts memory depth and 2 GSa/s sampling rate allows detailed analysis of captured glitches
- 10,000-count resolution on DMM display
- Channel-to-channel isolation with CAT III 300 V safety ratings
- Data logging capability to PC
- 10 selectable languages on the User Interface (UI) system

5.7-inch VGA display with 3 selectable viewing modes

Visualizing electrical waveforms has never been in such clarity. Our U1610A/U1620A oscilloscope comes with a 5.7-inch VGA TFT LCD display that enables clear viewing of measurements on-site and on the field. With the option of up to three viewing modes, users can now view waveforms under all lighting conditions, including in indoor, outdoor or dark environments. All three viewing modes have predefined contrast levels for customized lighting conditions and optimized battery life.

Indoor mode

The indoor mode has high contrast and brightness levels to clearly distinguish waveforms under an indoor light environment. Engineered with a VGA TFT LCD screen, users can now view the display across wide viewing angles for more efficient troubleshooting task.



Figure 1. Indoor mode for clear distinct readings

Outdoor mode

When performing field work in an outdoor environment, users can easily switch to this viewing mode via a set of accessible soft keys. This mode works in an anti-glare mechanism; it filters out excessive sunlight, hence reducing the risk of misreading or misinterpreting measurements.



Figure 2. Outdoor mode that is sunlight viewable

Night vision mode

The night vision mode is tailored to be viewable under subdued lighting by enabling high contrast levels between the screen background and waveforms. With a single press of button, this mode is activated and the screen automatically adjusts with proper colour correction—creating clear contrasts between the waveforms against the dark environment. This mode is useful when measuring high speed signals, particularly in non-repetitive signals.

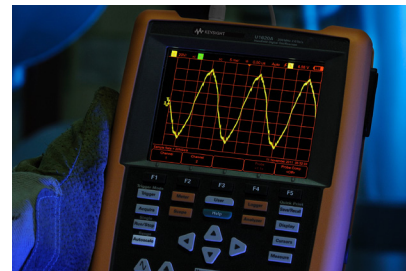


Figure 3. Night vision mode for performing tasks in a poorly lit environment

2 Mpts memory depth and 2 GSa/s sampling rate allows detailed analysis of captured glitches

A good oscilloscope must be accompanied with even better specifications for an in-depth analysis of captured glitches. With deep memory of 2 Mpts and sampling rate of 2 GSa/s, non-repeating signals can be captured over a wider time base. What's more, its dual window zoom feature allows you to work more productively by simultaneously viewing signals captured over a period of time and zooming into the most subtle details.


Channel-to-channel isolation with CAT III 300 V safety ratings

The U1610/U1620A extends the maximum input rating to cater for high voltage measurement and transient voltages which are recordable via a handheld oscilloscope. Equipped with the most robust isolation topology, technicians can now measure signals in the field and perform floating measurements. This type of isolation enables each channel to be individually isolated from one another and from other non-isolated system components.

Up to 10 selectable languages programmed in the scope

The U1610A/U1620A is programmed with up to 10 selectable languages (English, French, German, Italian, Spanish, Portuguese, Traditional and Simplified Chinese, Japanese and Korean) on the User Interface (UI) system and help menu. The diverse range of languages offered here gives users the choice to operate the unit in the language that they are most comfortable in.

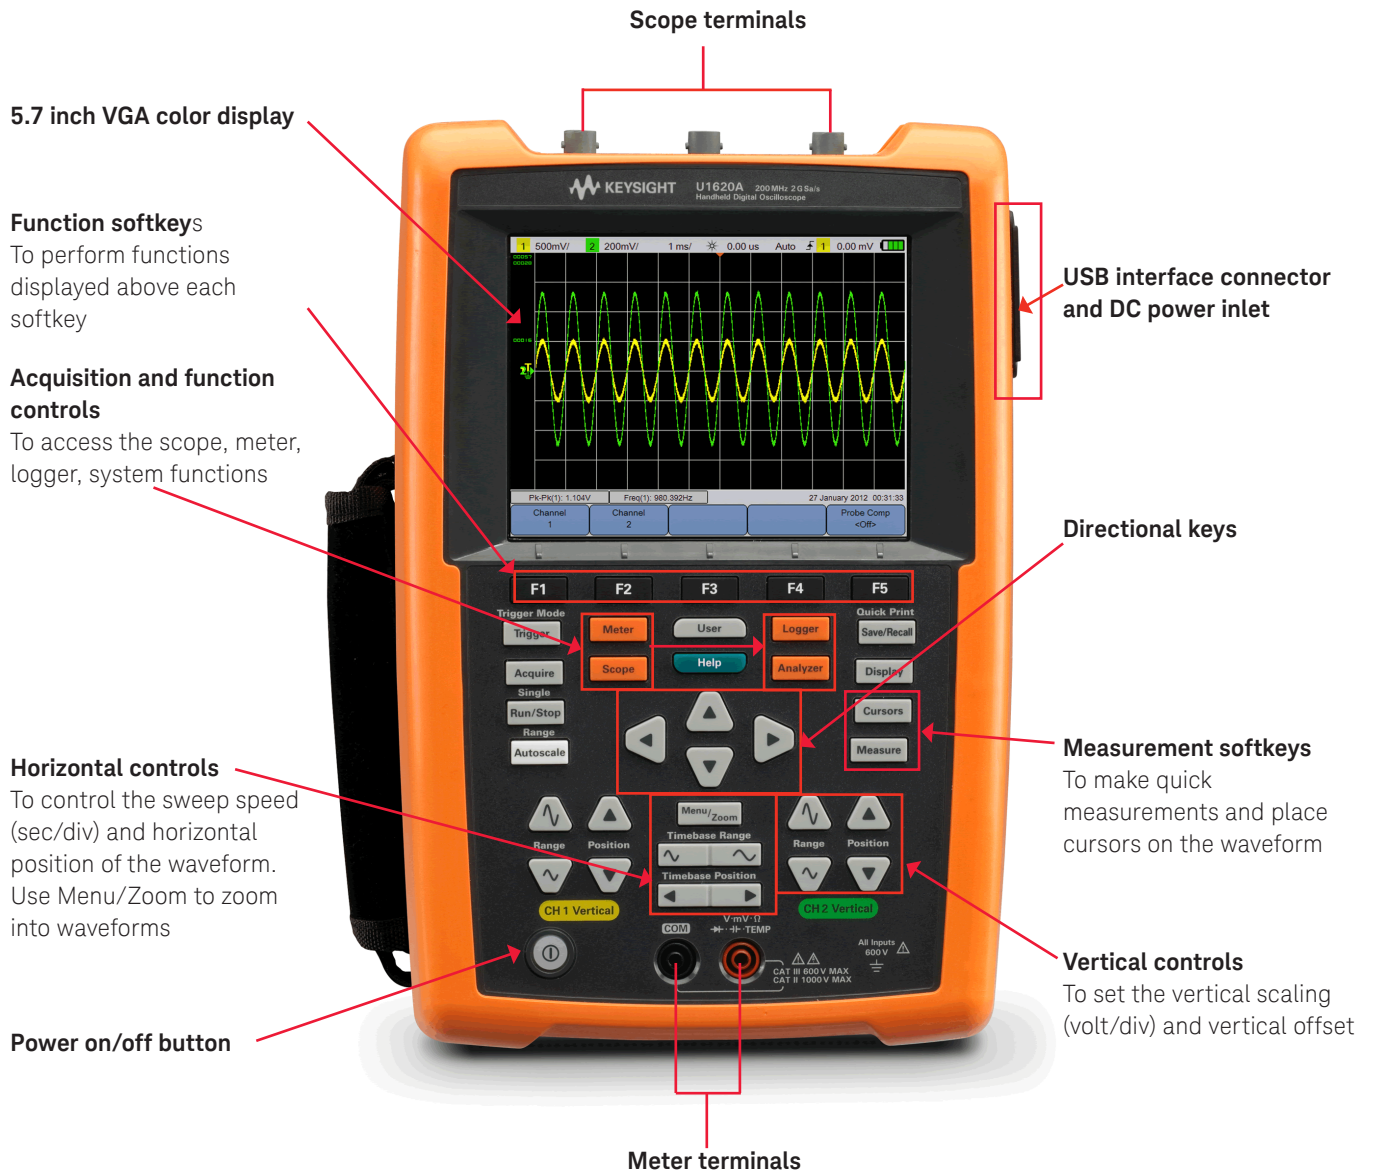

Front panel description




Outdoor viewing mode as illustrated

Figure 4. The U1620A as shown

Specifications

	U1610A	U1620A
Specification		
Vertical system		
Bandwidth (-3 dB) ¹	100 MHz	200 MHz
DC vertical gain accuracy ¹	± 4% of full scale	
	Full scale is equivalent to 8 div	
Dual cursor accuracy ¹	± {DC vertical gain accuracy + 0.4% full scale (~1 least significant bit (LSB))}	
	± {4% full scale ± 0.4% full scale (~1 LSB)}	
Characteristic		
Acquisition		
Maximum Sampling Rate		
Single Chanel Operation	1 GSa/s interleave	2 GSa/s interleave
Dual Channel Operation	500 MS/s each channel	1 GS/s each channel
Maximum Recording Length		
Single Chanel Operation	120 Kpts interleave	2 Mpts interleave
Dual Channel Operation	60 Kpts each channel	1 Mpts each channel
Vertical resolution	8 bits	
Peak detection	> 10 ns	> 5 ns
Average	Selectable from 2 to 8192 in powers-of-2 increments	
Filter	10 kHz and 20 MHz bandwidth limiters	
Interpolation	(Sin x)/x	
Vertical system		
Analog channels	Channel 1 and Channel 2 simultaneous acquisition	
Calculated rise time	3.50 ns typical	1.75 ns typical
Vertical scale	2 mV/div to 50 V/div	
Maximum input 	CAT III 600 V (with 10:1 probe)	
	CAT III 300 V (direct)	
Offset (position) range	± 4 div	
Dynamic range	± 8 div	
Input impedance	1 MΩ ± 1% ≈ 22 pF ± 3 Pf	
Coupling	DC, AC	
Bandwidth limit	10 kHz and 20 MHz (selectable)	
Channel-to-channel isolation (with channels at the same V/div) 	CAT III 300 V	
Probes	U1560-60002 1:1 passive probe	
	U1561-60002 10:1 passive probe	
	U1562-60002 100:1 passive probe	
Probe attenuation factors	1x, 10x, 100x	
Probe compensation output	5 V _{pp} , 1 kHz	
Noise peak-to-peak (typical)	3% of full scale or 5 mV _{pp} , whichever greater	
DC vertical offset (position) accuracy	± 0.1 div ± 2 mV ± 1.6% offset value	
Single cursor accuracy	± {DC vertical gain accuracy + DC vertical offset accuracy + 0.2% full scale (~1/2 least significant bit (LSB))}	
	± {4% full scale ± 0.1 div ± 2 mV ± 1.6% offset value + 0.2% full scale (~1/2 LSB)}	

Specifications (continued)

	U1610A	U1620A
Characteristic (continued)		
Horizontal system		
Range	5 ns/div to 50 s/div	2 ns/div to 50 s/div
Resolution	100 ps for 5 ns/div	40 ps for 2 ns/div
Timebase accuracy	25 ppm	
Reference position	Left, center, right	
Delay range (pre-trigger)	1 screen width or 120 μ s (whichever less)	1 screen width or 1 ms (whichever less)
Delay range (post-trigger)	50 ms to 500 s	20 ms to 500 s
Delay resolution	100 ps for 5 ns/div	40 ps for 2 ns/div
Delay time measurement accuracy	Same channel: $\pm 0.0025\%$ reading $\pm 0.17\%$ screen width ± 60 ps Channel-to-channel: $\pm 0.0025\%$ reading $\pm 0.17\%$ screen width ± 120 ps	
Modes	Main, zoom, XY, roll	
Horizontal pan and zoom	Dual window zoom	
Trigger system		
Sources	Channel 1, Channel 2, External	
Modes	Normal, Single, Auto	
Types	Edge, Glitch, TV, Nth Edge, CAN, LIN	
Autoscale	Finds or displays active channels, sets the edge trigger type on the highest numbered channel, and sets the vertical sensitivity on the scope channel timebase to display ~ 2 periods Requires > 10 mV _{pp} minimum voltage, 0.5% duty cycle, and > 50 Hz minimum frequency	
Holdoff time	60 ns to 10 s	
Range	± 6 div from center of screen	
Sensitivity	≥ 10 mV/div: 0.5 div < 10 mV/div: greater of 1 div or 5 mV	
Trigger level accuracy	± 0.6 div	
Coupling modes	AC (~ 10 Hz), DC, LF-Reject (~ 35 kHz), HF-Reject (~ 35 kHz)	
External trigger		
- Input impedance	1 M Ω \approx 10 pF	
- Maximum input	CAT III 300 V	
- Range		DC coupling: trigger level ± 5 V
- Bandwidth		100 kHz
Measurement		
Automatic measurements	Delay, duty cycle (+/-), fall/rise time, frequency, period, phase shift, T-max, T-min, width (+/-), amplitude, average, base, crest, cycle mean, maximum, minimum, overshoot, peak-to-peak, preshoot, standard deviation, top, Vrms (AC/DC), active/apparent/reactive power, power factor AC current (with U1583B/1146A), DC current (with 1146A)	
Waveform math functions	CH1 + CH2, CH1 - CH2, CH2 - CH1, CH1 \times CH2, CH1/CH2, CH2/CH1, d/dt (CH1), d/dt (CH2), \int (CH1)dt, \int (CH2)dt, FFT	
Cursors	Delta V: Voltage difference between cursors Delta T: Time difference between cursors	
FFT points	1024	
FFT windows	Rectangular, Hamming, Hanning, Blackman-Harris, Flattop	

Specifications (continued)

	U1610A	U1620A
Characteristic (continued)		
Display system		
Display	5.7" TFT LCD VGA Color (outdoor readable)	
Resolution	VGA (screen area): 640 vertical by 480 horizontal	
Control	Vectors on/off, sin x/x interpolation on/off, infinite persistence on/off, backlight intensity, color scheme, clear display	
Real-time clock	Date and time (adjustable)	
Language	10 languages (selectable)	
Built-in help system	Functional quick help displayed by pressing the [Help] button	
Storage system		
Save/recall (non-volatile)	10 setups and waveforms can be saved and recalled internally	
Storage mode	USB 2.0 full speed host port (Support up to 4GB USB drive)	
	Image formats: .bmp (8-bit, 24-bit) and .png (24-bit)	
	Data format: .csv	
I/O	USB 2.0 full-speed host, USB 2.0 full-speed client	
Printer compatibility	PCL Inkjet, PCL Laser	

1. Denotes warranted specifications, all others are typical. Specifications are valid after a 30-minute warm-up period and within 23 ± 10 °C of last calibration temperature.

Maximum input voltages and channel isolation

U1610A and U1620A	
Maximum input voltages	
Input CH1 and CH2 direct (1:1 probe)	300 V CAT III
Input CH1 and CH2 (1:10 probe)	600 V ¹ CAT III, 1000 V ¹ CAT II
Input CH1 and CH2 (1:100 probe)	600 V ¹ CAT II, 1000 V ¹ CAT II, 3540 V ¹ CAT I
Meter input	600 V CAT III, 1000 V CAT II
Scope input	300 V CAT III
Voltage ratings	Vrms 50–60 Hz (AC sine wave), VDC (DC applications)
Channel isolation	
From any terminal to earth ground	300 Vrms CAT III

1. Refer to the respective probe's manual for more information on the specification

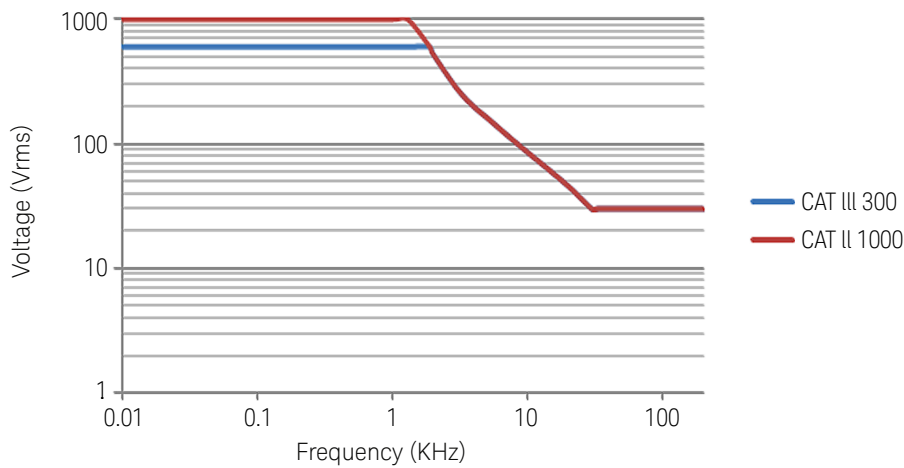


Figure 5. Maximum safety voltage for scope reference to earth

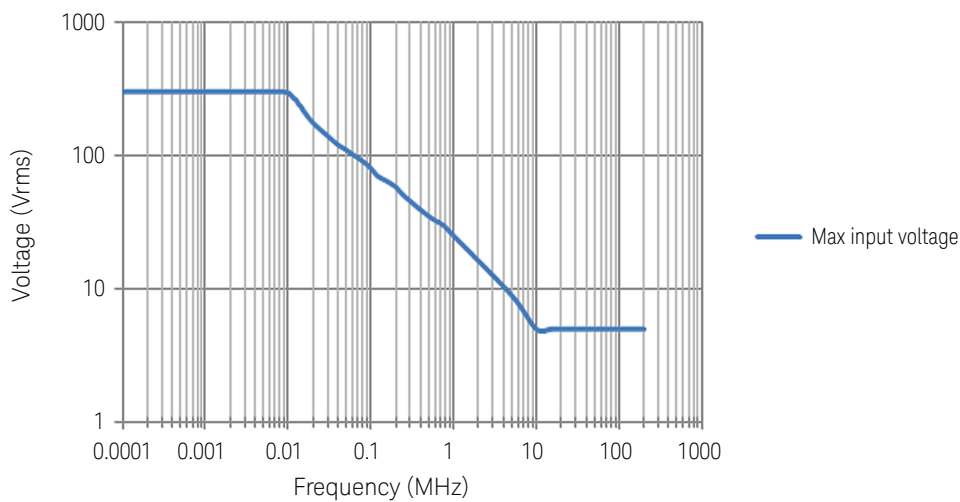


Figure 6. Maximum input voltage

Digital multimeter specifications

- Accuracy is given as \pm (% of reading + counts of least significant digit) at 23 ± 5 °C, with relative humidity < 80 RH.
- AC V specifications are AC coupled, true RMS and are valid from 5% to 100% of range.
- Temperature coefficient is given as $0.1 \times$ (specified accuracy) / °C (from 0 to 18 °C or 28 to 50 °C).
- Common mode rejection ratio (CMRR) is > 90 dB at DC, 50/60 Hz \pm 0.1% (1 k Ω unbalanced).
- Normal mode rejection ratio (NMRR) is > 60 dB at 50/60 Hz \pm 0.1%.

Maximum reading		10,000 counts with automatic polarity indication			
Voltage ¹		CAT II 1000 V or CAT III 600 V			
Function	Range	Resolution	Accuracy	Input impedance (nominal)	Test current
DCV	100.00 mV ²	0.01 mV	0.1% + 5	> 1 G Ω	
	1000.0 mV	0.1 mV	0.09% + 5	11.11 M Ω	
	10.000 V	0.001 V	0.09% + 2	10.10 M Ω	
	100.00 V	0.01 V		10.01 M Ω	
	1000.0 V ³	0.1 V	0.15% + 5		
ACV	100.0 mV	0.01 mV	1% + 5 (40 Hz to 2 kHz)	> 1 G Ω	
	1000.0 mV	0.1 mV	1% + 5 (40 to 500 Hz)	10.00 M Ω	
			2% + 5 (500 Hz to 1 kHz)		
			1% + 5 (40 to 500 Hz)		
	10.000 V	0.001 V	1% + 5 (500 Hz to 1 kHz)		
100.00 V	0.01 V	2% + 5 (1 to 2 kHz)			
1000.0 V ³	0.1 V	1% + 5 (40 to 500 Hz)			
		1% + 5 (500 Hz to 1 kHz)			
ACV + DC V	100.0 mV ²	0.01 mV	1.1% + 5 (40 Hz to 2 kHz)	> 1 G Ω	
	1000.0 mV	0.1 mV	1.1% + 10 (40 to 500 Hz)	10.00 M Ω	
			2.1% + 10 (500 Hz to 1 kHz)		
	10.000 V	0.001 V	1.1% + 7 (40 to 500 Hz)		
			1.1% + 7 (500 Hz to 1 kHz)		
100.00 V	0.01 V	2% + 5 (1 to 2 kHz)			
1000.00 V ³	0.1 V	1.2% + 10 (40 to 500 Hz)			
		1.2% + 10 (500 Hz to 1 kHz)			
Diode ⁴	1 V	0.001 V	0.3% + 2		~0.5 mA

Beeper < ~50 mV, single tone for normal forward-biased diode or semiconductor junction of $0.3 \text{ V} \leq \text{reading} \leq 0.8 \text{ V}$ ⁵
 Overload protection: 1000 Vrms for short circuit with < 0.3 A
 Open voltage: < +2.8 VDC

1. Only allowed to measure up to CAT III 600 V if referring to GND.
2. In an open connection, the reading shown on the display is noise pickup due to the high input impedance at the input terminal.
3. Only allowed for floating voltage
4. Denotes typical specifications, all others are warranted.
5. Denotes characteristics.
6. The accuracy is specified after the Null function is used to subtract the test lead resistance and thermal effect.
7. RH is specified for < 60%. The temperature coefficient is $0.15 \times$ specified accuracy as > 50 M Ω .
8. The accuracy is based on film capacitors or better and uses the Relative mode for residual values.

NOTE: Keysight recommends using the U1586B temperature adapter for temperature measurement. Refer to <http://literature.cdn.keysight.com/litweb/pdf/5990-9523EN> for more information on the U1586B specifications.

Digital multimeter specifications (continued)

Maximum reading		10,000 counts with automatic polarity indication				
Voltage ¹		CAT II 1000 V or CAT III 600 V				
Function	Range	Resolution	Accuracy	Input impedance (nominal)	Test current	
Instant continuity ⁴	Continuous beep when resistance < 10 Ω ⁵					
Resistance	1000.00 Ω ⁶	0.1 Ω	0.3% + 3		0.5 mA	
	10.000 kΩ ⁶	0.001 kΩ			50 μA	
	100.00 kΩ	0.01 kΩ			4.91 μA	
	1000.0 kΩ	0.1 kΩ			447 nA	
	10.000 MΩ	0.001 MΩ			0.8% + 3	112 nA
	100.00 MΩ ⁷	0.01 MΩ			1.5% + 3	112 nA
Capacitance	1000.0 nF	0.1 nF				
	10.000 μF	0.001 μF				1.2% + 4 ⁸
	100.00 μF	0.01 μF				
	1000.0 μF	0.1 μF				2% + 4 ⁸
	10.000 mF	0.001 mF				
Frequency ⁴	100.00 Hz	0.01 Hz				
	1000.0 Hz	0.1 Hz				
	10.000 kHz	0.001 kHz				0.03% + 3
	100.00 kHz	0.01 kHz				
	1000.0 kHz	0.1 kHz				

1. Only allowed to measure up to CAT III 600 V if referring to GND.
2. In an open connection, the reading shown on the display is noise pickup due to the high input impedance at the input terminal.
3. Only allowed for floating voltage.
4. Denotes typical specifications, all others are warranted.
5. Denotes characteristics.
6. The accuracy is specified after the Null function is used to subtract the test lead resistance and thermal effect.
7. RH is specified for < 60%. The temperature coefficient is 0.15 × specified accuracy as > 50 MΩ.
8. The accuracy is based on film capacitors or better and uses the Relative mode for residual values.

NOTE: Keysight recommends using the U1586B temperature adapter for temperature measurement. Refer to <http://literature.cdn.keysight.com/litweb/pdf/5990-9523EN> for more information on the U1586B specifications.

Data logger specifications

Scope and meter logger	
Range	1 s/div – 86400 s/div (1 day/div)
Recording time span	8 days
Memory depth	691200 points
Recording mode	Continuous (Range will change according to the time elapsed)
Sampling rate	1 sample/s

General specifications

Power supply	
Power adapter	Line voltage range: 50/60 Hz, 100 to 240 VAC, 1.6 A
	Output voltage: 15 VDC, 4 A
	Installation Category II
Battery	Li-Ion rechargeable battery pack, 10.8 V
	Operating time: Up to 3 hours
Operating environment	
Temperature	0 to 50 °C (with battery only)
	0 to 40 °C (with power adapter)
Humidity	0 to 80% RH (0 to 35 °C)
	0 to 50% RH (35 to 40/50 °C)
	Altitude up to 2000 m
	Pollution degree 2
Storage compliance	
Temperature	-20 to 70 °C
Humidity	0 to 80% RH
	Altitude up to 15000 m
Shock	Tested to IEC 60068-2-27
Vibration	Tested to IEC 60068-2-6, IEC 60068-2-64
Safety compliance	IEC 61010-1:2001/EN 61010-1:2001
	Canada: CAN/CSA-C22.2 No. 61010-1-04
	USA: ANSI/UL 61010-1:2004
EMC compliance	IEC 61326-1:2005/EN 61326-1:2006
	Australia/New Zealand: AS/NZS CISPR 11:2004
	Canada: ICES/NMB-001:ISSUE 4, June 2006
IP rating	IP 41 ingress protection according to IEC 60529
Dimensions (W × H × D)	183 x 270 x 65 mm
Weight	< 2.5 kg
Warranty	3 years for main unit
	3 months for standard shipped accessories unless otherwise stated

Ordering information

Standard shipped items


- Quick start guide, power adapter, Li-Ion battery pack, USB cable, test lead, 10:1 probe (2 sets), Certificate of Calibration (CoC).

Recommended accessories

Item U1146B	Probe - 100 kHz, 100A AC/DC current probe	
U1161A	Test lead kit, extended	
U1162A	Alligator clip	
U1163A	Grabbers, SMT	
U1164A	Test probes, fine tip	
U1168B	Test lead kit	
U1169A	Test probe leads (with 19-mm tips and 4-mm tips)	
U1176A	LED flash light	
U1554B	Probe tip, CAT III 1000V, CAT IV 600V	
U1560B	Scope probe - X1, CAT III 600V	
U1561B	Scope probe - X10, CAT III 1000V	
Item U1562B	Scope probe - X100, CAT III 1000V	
U1572A	Li Polymer battery pack	
U1573A	Desktop charger and Li Polymer battery pack	
U1574A	AC/DC adapter	
U1575A	Desktop charger	
U1577A	USB cable	
U1580A	DMM terminal test lead set	
U1583B	AC current clamp	
U1586B	Temperature module	
U1591A	Soft carrying case	

Evolving

Our unique combination of hardware, software, support, and people can help you reach your next breakthrough. **We are unlocking the future of technology.**

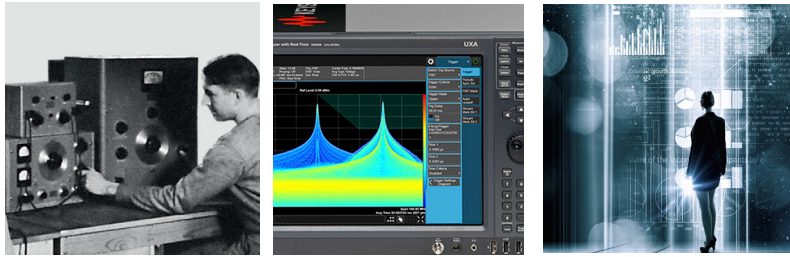

From Hewlett-Packard to Agilent to Keysight

myKeysight

myKeysight

www.keysight.com/find/mykeysight

A personalized view into the information most relevant to you.

KEYSIGHT SERVICES

Accelerate Technology Adoption.
Lower costs.

Keysight Services

www.keysight.com/find/service

Our deep offering in design, test, and measurement services deploys an industry-leading array of people, processes, and tools. The result? We help you implement new technologies and engineer improved processes that lower costs.



Three-Year Warranty

www.keysight.com/find/ThreeYearWarranty

Keysight's committed to superior product quality and lower total cost of ownership. Keysight is the only test and measurement company with three-year warranty standard on all instruments, worldwide. And, we provide a one-year warranty on many accessories, calibration devices, systems and custom products.



Keysight Assurance Plans

www.keysight.com/find/AssurancePlans

Up to ten years of protection and no budgetary surprises to ensure your instruments are operating to specification, so you can rely on accurate measurements.

Keysight Channel Partners

www.keysight.com/find/channelpartners

Get the best of both worlds: Keysight's measurement expertise and product breadth, combined with channel partner convenience.

www.keysight.com/find/handheldscope

www.keysight.com/find/U1600

For more information on Keysight Technologies' products, applications or services, please contact your local Keysight office. The complete list is available at: www.keysight.com/find/contactus

Americas

Canada	(877) 894 4414
Brazil	55 11 3351 7010
Mexico	001 800 254 2440
United States	(800) 829 4444

Asia Pacific

Australia	1 800 629 485
China	800 810 0189
Hong Kong	800 938 693
India	1 800 11 2626
Japan	0120 (421) 345
Korea	080 769 0800
Malaysia	1 800 888 848
Singapore	1 800 375 8100
Taiwan	0800 047 866
Other AP Countries	(65) 6375 8100

Europe & Middle East

Austria	0800 001122
Belgium	0800 58580
Finland	0800 523252
France	0805 980333
Germany	0800 6270999
Ireland	1800 832700
Israel	1 809 343051
Italy	800 599100
Luxembourg	+32 800 58580
Netherlands	0800 0233200
Russia	8800 5009286
Spain	800 000154
Sweden	0200 882255
Switzerland	0800 805353
	Opt. 1 (DE)
	Opt. 2 (FR)
	Opt. 3 (IT)
United Kingdom	0800 0260637

For other unlisted countries:
www.keysight.com/find/contactus
(BP-2-23-17)



www.keysight.com/go/quality
Keysight Technologies, Inc.
DEKRA Certified ISO 9001:2015
Quality Management System



Unlocking Measurement Insights

This information is subject to change without notice.
© Keysight Technologies, 2013 - 2016, 2017
Published in USA, June 15, 2017
5990-9523EN
www.keysight.com